


# DRAPERY Programming

## THINGS TO KNOW

### BATTERY MOTOR

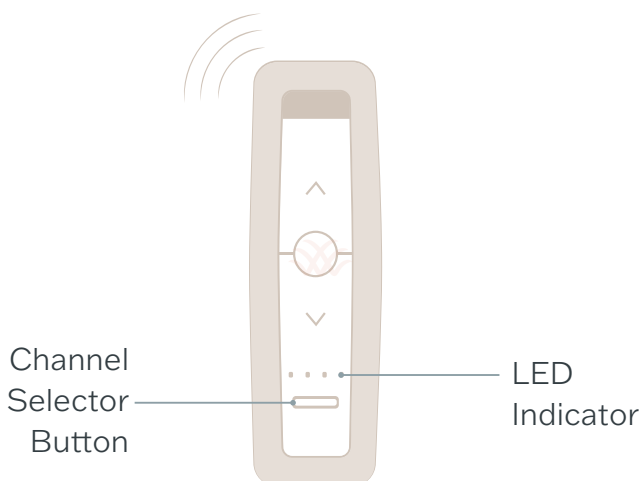

### HANDHELD REMOTE

- 1** Insert battery pack and listen for beep to indicate power on.
- 2** If programming a 1-channel remote, go to step 3. If 5-channel, select a channel to link by pressing the Channel Selector button. The LED will light to indicate the channel has been selected.
- 3** Press and hold UP and DOWN buttons simultaneously. Drape will jog once. Remote is now paired to the motor.
- 4** Test programming! Drape should open by pressing UP button and close when pressing DOWN button.
- 5** If direction is incorrect, press and hold MY button until drape jogs once to modify direction. Repeat step 4 to confirm.
- 6** Using a paper clip, briefly press Programming Button, located in the back of the remote, until drape jogs once. All settings are now confirmed and programming is complete.
- 7** If programming multiple treatments (5 channel remote), repeat steps 1-6 for subsequent channels.

**NOTE:** When working with multiple motorized drapes, power only the one being programmed.