


DRAPERY Programming

THINGS TO KNOW

PLUG AND PLAY MOTOR

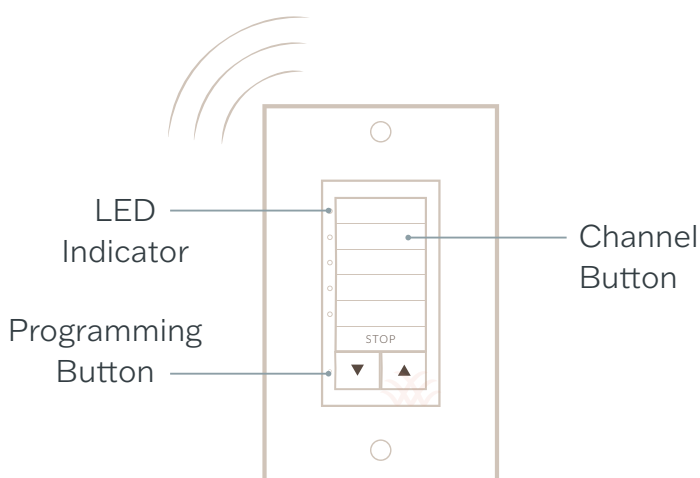

WIRELESS WALL SWITCH

- 1** Plug in motor to power.
- 2** Press and hold UP/OPEN and DOWN/CLOSED simultaneously until the drapery jogs.
- 3** Briefly press UP/OPEN and DOWN/CLOSED, the drapery automatically runs to record both hard stop positions.
- 4** Check the direction of operation.
 - Press UP/OPEN. If the drapery opens, the direction of rotation is correct.
 - If the drapery closes, the direction of rotation is incorrect, press the MY/STOP button until the drapery jogs.
 - The direction of rotation has been modified.
 - To confirm press UP/OPEN and check the direction of rotation again.
- 5** Confirm Programming: Using a paper clip, press and hold the programming button left of the DOWN arrow until the drapery jogs once. Wireless wall switch is now recorded. To operate the drapery press UP/OPEN or DOWN/ CLOSE. The drapery is now in user mode.

Repeat steps 1-5 for subsequent channels.

NOTE: When working with multiple motorized drapes, power only the one being programmed.