




ROLLER SHADE Installation

THINGS TO KNOW

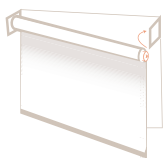


1. CORE BRACKET INSTALLATION: Installation of the bracket is slightly different if you are mounting inside or outside of the window frame. Regardless of the placement of the bracket, whether mounted inside or outside, the same hardware is used. Once you have determined the placement of the bracket, drill two screws securely through the bracket into the wall/frame. Use a level to ensure brackets are even across the window.




2. SHADE INSTALLATION: The tube has a clutch drive at one end and an idle tensioning device at the other. Place the tension end in the bracket hole and simultaneously slip the clutch drive into the allotted fitting (opposite end).



3. TENSION DEVICE INSTALLATION: With a child safety-tension device, a child's head should not be able to fit through the loop of the chain as it is fastened to the wall tight enough to prevent this scenario (but loose enough to promote fluid operation of the shade). The chain loop should not be able to be pulled further away from the wall than 6 inches. In order to install this device, drill two screws into the device opening holes, securing to wall.

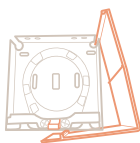

4. FASCIA INSTALLATION: The fascia snaps into place, held up by tension only (no tools or screws required). Hook the small lip of the fascia into the groove at the top of the bracket, then snap the fascia into the bottom of the bracket

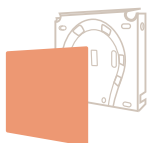

5. END CAP INSTALLATION (Outside mount only): Clip end cap onto the end of bracket, then proceed to the opposite bracket. No tools required.