



# ROLLER SHADE Programming

## THINGS TO KNOW

### WIRELESS WALL SWITCH

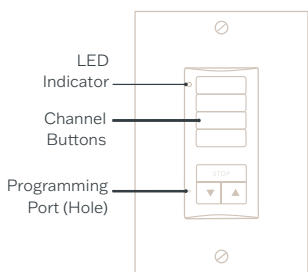

### POWERED MOTOR

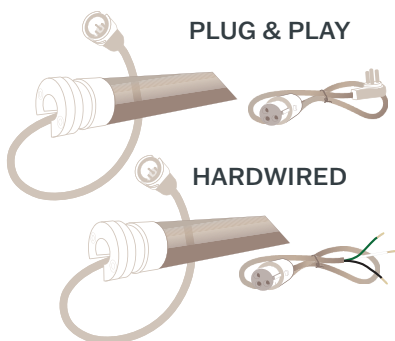

**Note:** When working with multiple motorized shades, power only the one being programmed.

You will need a paper clip on hand!

1. Remove plug from power for 2 seconds. Plug in shade power cord for 10 seconds. Remove plug from power for 2 seconds. Plug in cord again and leave in place. Roller shade will jog\* once. Insert paper clip in Programming Port on remote. Press and hold for approximately 20 seconds until roller shade jogs twice.
  2. On the Wall Switch, select a channel to link by pressing the Channel button. The LED Indicator will illuminate the channel selected.
  3. Press and hold UP and DOWN buttons simultaneously until shade jogs once. Switch is now paired to the motor.
- 
4. Test roller shade by pressing DOWN.  
If direction is incorrect, press and hold STOP button until shade jogs once to modify direction. Repeat step 4 to confirm.
  5. Press UP to move the shade to the desired upper position. Press and hold STOP and DOWN simultaneously until shade starts to move, then release. Upper limit is now programmed.  
If shade stops when buttons are released, take back to upper limit and repeat. Stop shade at desired location by pressing STOP.
  6. Press and hold STOP and UP simultaneously until shade starts to move, then release. Lower limit is now programmed.
  7. To confirm and complete limit programming, press and hold the STOP button until shade jogs once.
  8. Insert paper clip briefly in Wall Switch Programming Port and tap. Do not hold down (LED Indicator light should blink). Shade will jog once to indicate it is in user mode (no longer in programming mode).
  9. Repeat steps 1-8 for subsequent channels/motors.

\*A Jog is a brief up and down motion.